



Auto Meter Products Inc.

413 West Elm Street
Sycamore, IL 60178

Toll Free (866) 883-TEST (8378)
Fax (815)-895-6786
www.autometer.com

2650-1108-00
Rev. B

BVA-2100

Instruction Manual

Battery Load, Charging System, Starting System and Voltage Drop Tester for Light and Heavy-Duty Maintenance. Optional J1708 Hookup

Complement your battery testing with complete system test including a voltage drop test that measures the voltage drop of the starting and charging circuit. The BVA-2100 is automated and menu driven with simple hook-up methods for testing the negative and positive legs. Special tests are included for the magnetic switch circuit.

You have purchased one of Auto Meter's Heavy Duty charging and starting system analyzers. It is designed to test each circuit of a heavy duty or automotive starting and charging circuits with speed and accuracy. If you should have any questions about your tester or the testing procedures please see back cover for contact information.

BVA-2100

Test Capacity	500 Amp algorithmic load
Battery sizes	200-1600 CCA
Battery Voltages	6, 12, and 24 Volt
Charging System Voltages.....	12 Volt and 24 Volt
Starting System Voltages.....	12 Volt and 24 Volt
Graphic LCD w/ backlight	4.5" x 2.5"
Volt Ranges.....	Digital 0-40V
External Volt Rang	-40 to 40 Volts
Current Range	-1200 to 1200 Amps
Memory	Last 300 Tests
Internal Battery.....	6 V 7 Ah SLA
Cooling	Fan
Load Clamps.....	10 ft., 6 Gauge
External Leads	20ft 16 Gauge
Size	9.5" X 12" X 13"
Post Adapter Kit	For group 31 batteries
<i>Optional AC-25</i>	6 pin to 9 pin J1708 Adapter
<i>Optional AC-26</i>	J1708 Cable
<i>Optional AC-14</i>	Infrared printer
<i>Optional AC-10</i>	PC Interface adapter cord
Weight.....	25 lbs

What to Expect from the BVA-2100:

Immediately recognize a bad battery. Also perform a complete voltage drop test analysis on 12 and 24 Volt systems. Load test 6 and 12 Volt batteries and check 24 Volt batteries. Load 12 Volt and 24 Volt alternators. The BVA-2100 is a heavy-duty full-featured menu-driven battery tester and voltage drop tester that provides quick, professional load results using Auto Meter's advanced algorithmic load. The BVA-2100 has the option of using a J1708 cable. It is professionally accurate. Detailed test results are LCD displayed after each test and can be reviewed and printed from memory.

1 YEAR FROM DATE OF PURCHASE**CABLES 90 DAYS**

The manufacturer warrants to the consumer that this product will be free from defects in material or workmanship for a period of one (1) year from the date of original purchase (90 Days for cables).

Products that fail within this 1-year warranty period will be repaired or replaced at the manufacturer's option to the consumer when determined by the manufacturer that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts and the necessary labor by the manufacturer to effect the repair or replacement of the product. In no event shall the manufacturer be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product.


Improper use, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. The manufacturer disclaims any liability or consequential damages due to breach of any written or implied warranty on its test equipment.

WARRANTY AND SERVICE INFORMATION

Warranty claims to the manufacturer's service department must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser and is non-transferable. Shipper damage incurred during return shipments is not covered under this warranty. It is the responsibility of the shipper (the customer returning the Test Equipment) to package the tester properly to prevent any damage during return shipment. Repair costs for such damages will be charged back to shipper (customer returning the Test Equipment). Protect the product by shipping in the original carton. Add plenty of over-pack cushioning such as crumpled up newspaper.

CLAMP INSPECTION

IMPORTANT: Both jaws of each clamp must firmly engage all terminals. The copper jaw contains the smaller gauge wire that reads the voltage and the silver jaw contains the larger conducting wire that draws the load in each test. Jaw insulation is necessary for accurate readings. Damaged clamps or loose wires will affect the readings. Keep clamps clean and in good repair. **DO NOT ATTEMPT TO REPLACE CLAMPS WITH ANYTHING OTHER THAN AUTO METER CLAMPS.**

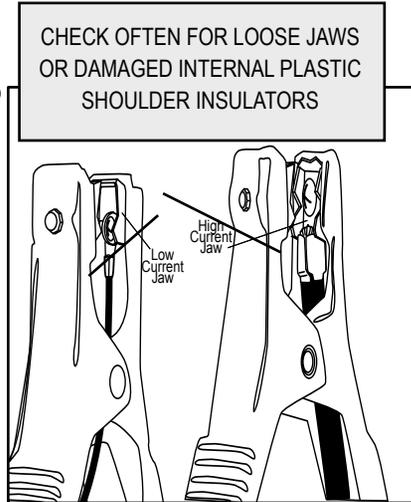

BATTERY CLAMP REPLACEMENT

Over time the battery clamps will need to be replaced if the following are indicated:

- CCA values seem to be way off.
- If there is continuity between the silver and copper jaw.
- If there is excessive damage or corrosion to the cables or clamps.

PROCEDURE

- Disconnect the back cover.
- Remove the battery to prevent shorting.
- Disconnect the two small wires from the PC board.
- Remove the large cables from the copper busses.
- Carefully pull each wire through the grommets.
- Reverse the procedure in replacing new clamps.
- **Caution:** Make sure the red clamp wires are attached to the positive buss and the black clamp is attached to the negative buss. Putting a little mineral spirits on the new cable ends will increase ease of insertion through the grommets.

INTERNAL 6V BATTERY

When the LCD indicates a low internal battery. Recharge the battery by either using the AC Adapter or connecting the large clamps to a fully charged 12V battery. To replace the internal battery, remove the top cover. The battery is towards the back of the unit. Disconnect the battery & remove the battery holder & battery. Replace with new 6V 7Ah SLA battery. Install battery & holder. Reconnect battery leads paying attention to the polarity. The - (minus) terminal should be connected to the folded black wire. Replace the top cover & charge the new battery before using.

Specifications -----2
 Safety -----4
 Cause of Battery Failure -----4
 Inspection and Visual Check -----5
 Controls and Functions -----6
 Configuring the BVA-2100 -----7-8

Test Sections

1. System Test Introduction -----9
 2. System Battery Bank Test ----- 10-11
 3. Individual Battery Test -----12-13
 4. Charging System Test -----14-18
 5. Charging Cable VDrop Test -----15-16
 VDrop Error messages ----- 16
 6. Individual Alternator Test ----- 17
 Alternator Test Results -----18
 Using the Amp Probe -----19
 7. Starting System Test -----20-27
 8. Magnetic Circuit Test -----21-23
 9. Starting Cable VDrop Test -----24-25
 10. Individual Starter Draw Test -----26
 Starter Test Results -----27
 11. Generic VDrop Test -----28-29

Other Menu Options

Review Tests -----30
 (Optional) Printer -----30-31
 Printing Test Results -----31
 Multimeters -----32
 J1708 Data -----33-34
 Setup -----35-36
 Clearing Test and Setting Language -----36
 PC Download Innterface -----37
 Using Windows -----38
 Downloading Test Information -----39
 Capturing Text in Microsoft Excel -----39
 About -----40
 Battery and VDrop Test System Specifications -----41

SAFETY

- Carefully read all operating instructions before operating the BVA-2100
- Wear eye protection when working on batteries.
- Be sure each test is complete before removing load clamps to prevent arcing and potential explosion from battery gases. Never remove load clamps while testing. Keep sparks, flames or cigarettes away from battery.
- Keep hair, hands, and clothing as well as tester leads and cords away from moving blades and belt.
- Provide adequate ventilation to remove exhaust.
- In extremely cold temperatures check for frozen electrolyte fluid or swelled case before applying load. Do not attempt to Load Test or charge a battery under 20° F. (-7°C.). Allow the battery to warm to room temperature before testing or charging.
- **Warning!** Never attach the BVA-2100 to a battery connected to any other tester or charging unit. Damage may result.



CAUSE OF BATTERY FAILURE

- **Incorrect Application:** Wrong size battery may have inadequate cold cranking rating for original vehicle specifications.
- **Incorrect Installation:** Loose battery hold-downs cause excessive vibration, which can result in damage to the plates.
- **Improper Maintenance:** Low electrolytic fluid and corrosion on battery connections can greatly reduce battery life and effect battery performance.
- **Internal Connections:** Make sure internal connections of entire charging system meet proper specifications.
- **Age of Battery:** If the date code on the battery is old, test failure may indicate the need of replacement.
- **Overcharging:** Overcharging caused by a high voltage regulator setting or incorrect battery charging can cause excessive gas, heat and water loss.
- **Undercharging:** Undercharging caused by a faulty charging system or low voltage regulator setting can cause lead sulfate to gradually build up and crystallize on the plates, greatly reducing the battery's capacity and ability to be recharged.
- **Cycling:** Excessive drain on battery when alternator is not operating.

DEFINITIONS - SYSTEM SPECIFICATIONS

BATTERY TEST

During each battery test the BVA-2100 uses various results that are displayed after each test. The definition of those results are as follows:

- **% Charge** = an approximate amount of charge the battery is currently holding. This is based upon the batteries voltage.
- **Est. CCA** = is the approximate CCA of the fully charged battery.
- **GOOD BATTERY** = a battery that is good and is charged.
- **GOOD NEEDS CHARGE** = a battery that is good but is low on charge.
- **MARGINAL BATTERY** = a battery that has passed the load test but the estimated CCA is getting low or the battery is approaching its end of life.
- **CHARGE and RETEST** = a battery with insufficient charge to provide accurate test results.
- **BAD BATTERY** = a battery that is bad and should be replaced. A bad battery is a battery that failed the load test or had an estimated CCA below about 70% of the rated value

VOLTAGE DROP TESTS

The specifications for those tests are listed below.

TEST	SYSTEM	PASS/FAIL
Charging Cables	12 Volt	Maximum drop at rated alternator output is 0.5 Volts
	24 Volt	Maximum drop at rated alternator output is 1.0 Volts
Main Starting Cables	12 Volt	Maximum drop at 500 Amps is 0.5 Volts
	24 Volt	Maximum drop at 250 Amps is 1.0 Volts
Magnetic Circuit Straight Drive	12 Volt	Maximum drop at 80 Amps is 1.0 Volts
	24 Volt	Maximum drop at 40 Amps is 2.0 Volts
Magnetic Circuit Gear Reduction	12 Volt	Maximum drop at 300 Amps is 1.0 Volts
	24 Volt	Maximum drop at 225 Amps is 2.0 Volts
Generic Voltage Drop Test	12 Volt	Reports the drops at the entered current
	24 Volt	Reports the drops at the entered current

The minimum system voltage to run a test is 12.25 Volts for a 12 Volt system and 24.5 Volts for a 24 Volt system.



By selecting the last item on the main menu...



Gives the version of the software.



The program can be updated to the most recent version by reflashing the memory. Before turning the unit on hold the (N Exc.) and the (Y Enter) key down simultaneously. The following will appear.




When a computer can be attached to the unit in the same way the test data can be downloaded. "REFLASHING!" will then appear while the program is updating.

The Flash Upgrade Application software will be available from a CD or can be downloaded from our website. Contact Auto Meter for more information.


Valid automotive electrical system testing depends on all the components being in good operating condition. In addition, the battery MUST have sufficient charge for testing. Carefully perform the following before attempting electrical diagnosis.

VISUAL CHECK

- **Inspect Battery** for terminal corrosion, loose broken posts, cracks in the case, loose hold-downs, low electrolyte level, moisture, and dirt around the terminal.

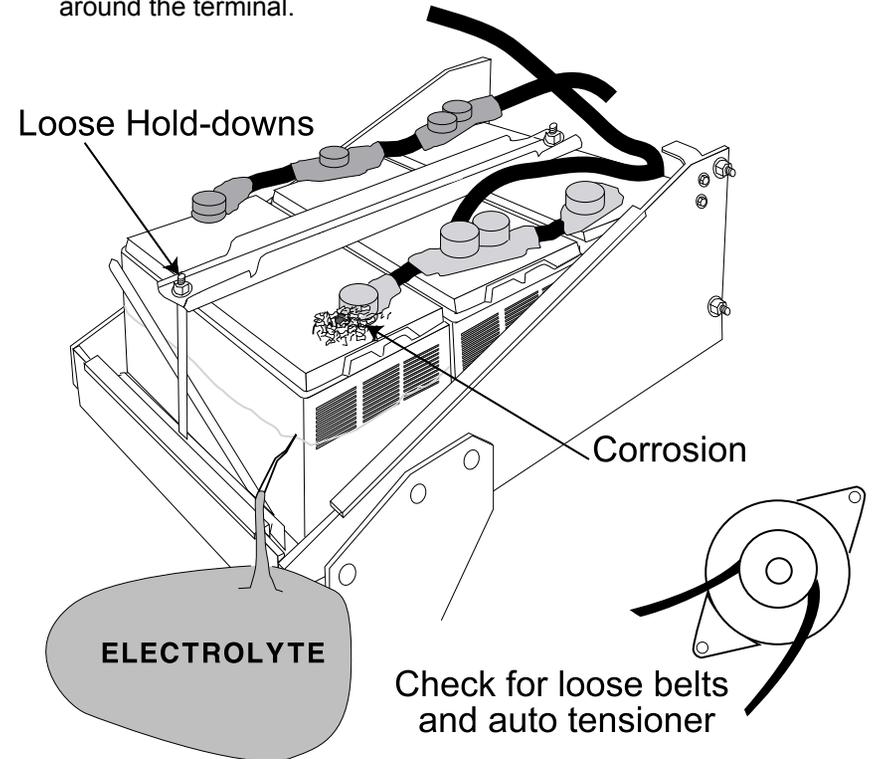

- **Important Note:** **A known defective battery must be replaced before proceeding with any test on the charging or starting system.**
- **Inspect Belts** for cracks, glazed surface and fraying. Tighten loose belts. Inspect auto-tensioner for proper belt tension.
- **Inspect Starting System.** Check starter, solenoid, and alternator for loose connections, loose mounts and frayed or cracked wires.

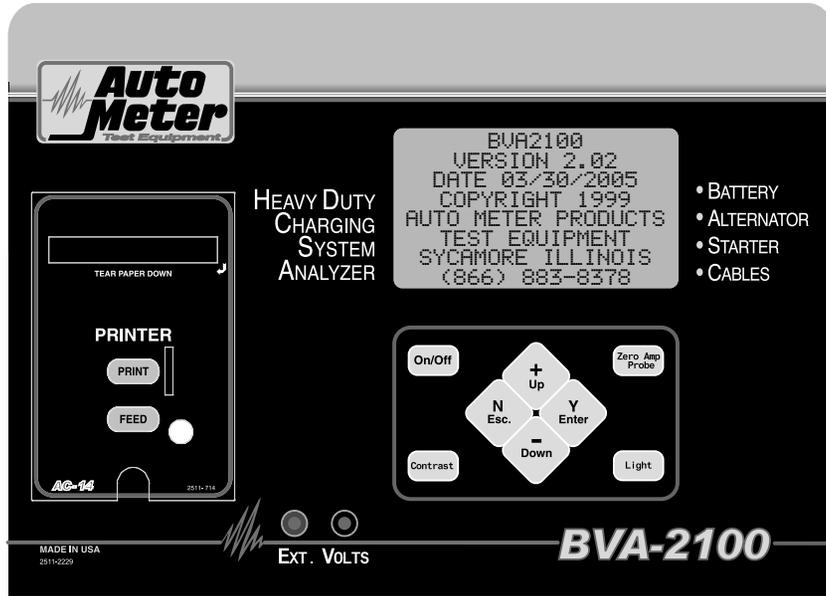

ON/OFF: Turns the unit and LCD display on. On the opening screen, Press 'Y' for menu.

Y ENTER: Selects the main or next menu. It also selects the cursor line item and answers yes to a test progression.

+Up Arrow: Moves the cursor up to select a menu item. It also increments a value.

-Down Arrow: Moves the cursor down to select a menu line. It also decrements a value.

N Esc: Cancels a test or progression. It also returns to a previous menu for another selection.

Contrast: Sets the LCD contrast.

Zero Amp Probe: Zero's the Amp Probe.


Light: Turns the LCD back light on or off.

PRINT: With Optional Printer - Prints the test results displayed on the LCD.

FEED: Advances the paper.

External Volt Lead Connections: Color-coded black (-) red (+)

On the rear panel there is an Amp Probe connection, power supply connection for charging the internal battery, when unit is not in use for some time, and the connector for the AC-26 J1708 cable.

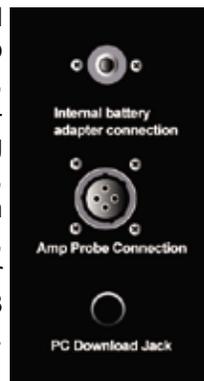

3. PC Screen Menu

- If the BVA-2100 is properly connected to your PC and the LCD shows "CONNECT ANALYZER TO A PC" the menu should automatically be displayed in Hyper Terminal.
- Press "1" to download the stored data.
 - To save the information displayed see "Capture text into Microsoft Excel." See BVA-2100 test labels below for identification.
- Press "Enter" to return to Menu.
- Press "Enter" to return to Menu.
- Press "3" to Exit.

4. Capturing Text Using Microsoft Excel

For other software applications consult your software manual. Make sure menu is displayed as in step 3.

- Make sure menu is displayed as in step 3.
- Select "Capture Text" in the Transfer Menu.
- Type in `c:\my documents\download.txt` and then select "Start."
- Press "1" to download. When finished select Capture Text again from the Transfer Menu then select Stop.
- Launch Microsoft Excel and select open file.
- Under "Files of Type" at the bottom of the open file window select All Files (*.*)
- Highlight your "**download.txt**" file then select Open.
- Select "Delimited" and start at row 1 then "Next"
- Select "Comma" then "Next"
- Under Column Date Format select "General" then "Finish"
- After the file is loaded you can delete unwanted rows and format columns as desired. The following are labels for identifying the 8 columns of information.

12V Battery	Beginning Volts	Loaded Volts	Rated CCA	Est. CCA	Temperature	1ST CCA	Amb. Temp
6V Battery	Beginning Volts	Loaded Volts	Rated CCA	Est. CCA	Temperature	1ST CCA	Amb. Temp
24V Battery	Beginning Volts	N/A	N/A	N/A	Temperature	N/A	Amb. Temp
Battery Bank	Beginning Volts	Loaded Volts	Rated CCA	# of Batteries	Temperature	N/A	Amb. Temp
12V Alter. (Not HD)	Beginning Volts	Max Amps	Ripple	N/A	Average Amps	Rated Current	Ext Volts
24V Alter. (Not HD)	Beginning Volts	Max Amps	Ripple	N/A	Average Amps	Rated Current	Ext Volts
12V Alter. (HD)	Beginning Volts	Max Amps	Ripple	Peak Volts	Average Amps	Rated Current	R-Term
24V Alter. (HD)	Beginning Volts	Max Amps	Ripple	Peak Volts	Average Amps	Rated Current	R-Term
12V Starter (Not HD)	Beginning Volts	Loaded Volts	N/A	N/A	Cranking Volts	N/A	Draw
24V Starter (Not HD)	Beginning Volts	Loaded Volts	N/A	N/A	Cranking Volts	N/A	Draw
12V Starter (HD)	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Cranking Volts	Pos Drop	Draw
24V Starter (HD)	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Cranking Volts	Pos Drop	Draw
Charge Drop	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	Rated Current	N/A
Start Drop	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	N/A	N/A
Start Split Drop	Beginning Volts 2	Loaded Volts 2	Ext Volts 2	Pos Drop 2	Neg Drop 2	Amps 2	Beginning Volts 1
MAG. Cir.	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	N/A	N/A
MAG. Por.	Beginning Volts	Loaded Volts	Ext Volts	Leg1 Drop	Mag Drop	Leg2 Drop	N/A
Generic Drop	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	Rated Current	N/A

Note: The BVA-2100 will interface with any basic (ANSI) terminal emulation software. Most operating systems contain a program that will do this. Following are instructions for Windows. For other operating systems consult the Manual for that system.

2. Opening Windows HyperTerminal:

- Select Windows Start
- Then "Programs"
- Then "Accessories"
- Then "Communications"
- Then Click "Hyper-Terminal"
- Double Click "Hypetrm.exe" application
- Type in a name for your connection
- Select an icon for future identification
- Select "OK"
- Select the COM port number you have previously identified in step 1.
- Select "OK" and select the following from the pull down menus:
 - Bits per second 9600
 - Data bits 8
 - Parity None
 - Stop Bits 1
 - Flow Control None
- Select "OK"

HyperTerminal
Windows



BVA-2100 Test Labels

12V Battery	Beginning Volts	Loaded Volts	Rated CCA	Est. CCA	Temperature	1ST CCA	Amb. Temp	Date
6V Battery	Beginning Volts	Loaded Volts	Rated CCA	Est. CCA	Temperature	1ST CCA	Amb. Temp	Date
24V Battery	Beginning Volts	N/A	N/A	N/A	Temperature	N/A	Amb. Temp	Date
Battery Bank	Beginning Volts	Loaded Volts	Rated CCA	# of Batteries	Temperature	N/A	Amb. Temp	Date
12V Alter. (Not HD)	Beginning Volts	Max Amps	Ripple	N/A	Average Amps	Rated Current	Ext Volts	Pos V
24V Alter. (Not HD)	Beginning Volts	Max Amps	Ripple	N/A	Average Amps	Rated Current	Ext Volts	Pos V
12V Alter. (HD)	Beginning Volts	Max Amps	Ripple	Peak Volts	Average Amps	Rated Current	R-Term	Engin
24V Alter. (HD)	Beginning Volts	Max Amps	Ripple	Peak Volts	Average Amps	Rated Current	R-Term	Engin
12V Starter (Not HD)	Beginning Volts	Loaded Volts	N/A	N/A	Cranking Volts	N/A	Draw	N/A
24V Starter (Not HD)	Beginning Volts	Loaded Volts	N/A	N/A	Cranking Volts	N/A	Draw	N/A
12V Starter (HD)	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Cranking Volts	Pos Drop	Draw	Oil Te
24V Starter (HD)	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Cranking Volts	Pos Drop	Draw	Oil Te
Charge Drop	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	Rated Current	N/A	N/A
Start Drop	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	N/A	N/A	N/A
Start Split Drop	Beginning Volts 2	Loaded Volts 2	Ext Volts 2	Pos Drop 2	Neg Drop 2	Amps 2	Beginning Volts 1	Load
MAG. Cir.	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	N/A	N/A	N/A
MAG. Por.	Beginning Volts	Loaded Volts	Ext Volts	Leg1 Drop	Mag Drop	Leg2 Drop	N/A	N/A
Generator Drop	Beginning Volts	Loaded Volts	Ext Volts	Pos Drop	Neg Drop	Rated Current	N/A	N/A

There are several options in the setup program that make each test different depending upon the shops standards and desires. With a few exceptions this manual will assume that the setup choice is "Heavy Duty" rather than "Regular Duty" and that there are no special setup requests that require additional input information. This is done to make the manual as simple as possible. Depending upon the choices in configuration there will be additional input requests during each test.


Below are the configuration choices of the BVA-2100 so you will know the options available even though they are not noted in each test of the manual. They are given here so that you can configure the tester for your needs before learning the operations. When a special LCD request appears that is not in the manual, you can refer to this section for better understanding.



From the main menu scroll to the bottom and select SETUP MENU



Then select CONFIGURE TESTER

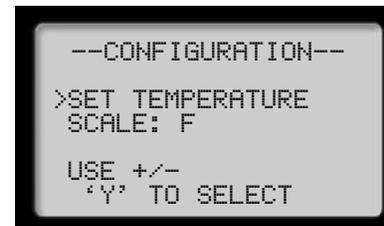

The first choice will be to set the temperature scale. Use the (Up) or (Down) key to adjust from F (Fahrenheit) or C (Celsius). The manual will be F.



To configure for Heavy Duty select YES. Using the (UP) or (Down) key to select NO will give you a different main menu. The tester must be turned off and rebooted to include and changes. The two menus are listed below.

The manual will use HEAVY DUTY and where tests differ radically the REGULAR will be illustrated.

REGULAR MENU


- BATTERY TEST
- STARTER DRAW TEST
- ALTERNATOR TEST
- VDROP TEST
- REVIEW
- MULTIMETERS
- HELP MENU / SETUP MENU
- DOWNLOAD

HEAVY DUTY MENU


- SYSTEM TEST
- BATTERY TEST
- VDROP MENU
- ALTERNATOR TEST
- STARTER DRAW TEST
- REVIEW
- REVIEW/PRINT
- MULTIMETERS
- J1708 DATA
- HELP MENU
- DOWNLOAD
- ABOUT BVA2100

CONFIGURING THE BVA-2100 CONT.

The following may be needed in fleet operations. The manual will assume NO in all cases. If you select YES, you will be asked to input the information or perform certain checks as requested in each test.

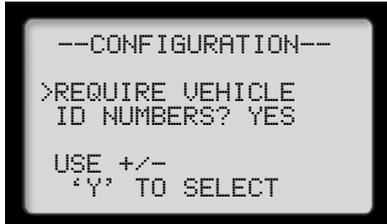

To require vehicle ID numbers select YES. The manual will assume NO.

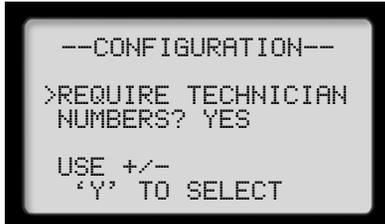

To require technician numbers select YES. The manual will assume NO.


When inputting numbers when required in each test, there will be a set of 0000. Use the (UP) or (Down) key to select the desired number for the first zero then press (ENTER) to advance to the next 0000.



To require visual checks select YES. The manual will assume NO.


The visual checks, when required for a particular test, will request CHECKS before continuing such as:

INSPECT BELT CONDITION - TENSION
 INSPECT CABLES AND ALTERNATOR OUTPUT
 INSPECT BATTERY FOR DIRT, LEAKS OR CRACKS
 INSPECT POSTS AND CONNECTIONS

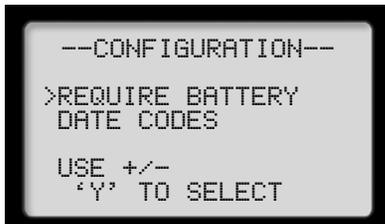


To require battery date code select YES. The manual will assume NO.

The date code has a letter for the month (A to M) and 01/00 for the day and the year. You have to increment each of these to the desired date that will print out in the standard 00/00 format.

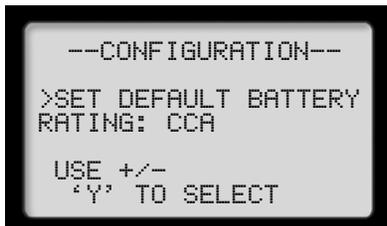

To set default battery rating select CCA, MCA, CA, EN, IEC, DIN, or NONE. The manual will assume CCA.

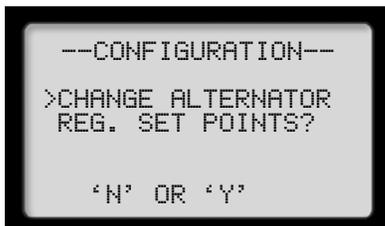

You can change the alternator regulation set points. Answer (NO) unless you are a skilled operator desiring different set point for your heavy duty operation. To change the alternator regulation set points the operator will have to enter an authorization code. The code is 009.

PC INTERFACE

1. Scroll down the main menu to DOWNLOAD. Press (Y Enter) to select.



Using Auto Meter's optional adapter cord AC-10 insert the plug into the jack on the BVA-2100 and then plug the serial adapter into a free serial port on your computer.



Note: Most computers are configured with at least one serial port (identified as COM 1), and some have a second serial port, usually identified as (COM 2). Check your computer manual to locate and identify a serial port connector. Even if you have a physical COM port you need to make sure it is working properly before you proceed. Consult your computer manual. If your computer serial port is configured for 25 pin you will need to obtain an adapter from your computer store. If your computer does not have an available serial port and you're planning on using *Windows HYPER Terminal* as illustrated below, you will need to buy and install an adapter card with a serial port.





Select **CLEAR LAST TEST** from memory. You will be asked to verify your selection after which the BVA-2100 will clear the last test.



Select **CLEAR LAST TEST** from memory. You will be asked to verify your selection after which the BVA-2100 will clear the last test.

You can set for English or Spanish




The system test is part of the Heavy Duty menu selection and not the regular menu.


IMPORTANT NOTE: The difference between a system test and the individual component test that follows in the menu is that each system test, whether it be the battery bank, the charging system or the starting system; prompts you through each prerequisite test including the cables and battery before the individual component is tested. The purpose is to avoid component replacement when the problem may be in the cables of the component being tested. The system test also allows error results that prompt specific action. This manual includes detailed menu prompts and instructions for the system test, but when it comes to the individual component test of a battery, alternator, starter, cables or magnetic switch you will be instructed to a certain segment of the system test to avoid needless repetition in the manual.

As mentioned in the configuration section above there is no appearance in this manual requesting the vehicle ID, technician ID etc. There are also no prompts to inspect components of the system. See the configuration section above for a better understanding if these items are required in your training.

Unless you are not using the Heavy Duty menu, it is advisable to use only the system test until you become proficient and have good reason to test an individual component.

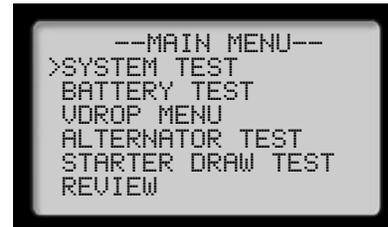


From the main menu select **SYSTEM TEST**.

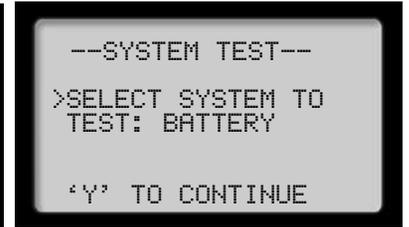


When System Test is selected, the last test selection will appear. You have a choice of **BATTERY, CHARGING** or **STARTING**. If another test appears in the LCD such as the **STARTING** and you want **BATTERY**, simply use the (+) or (-) key to select **BATTERY** and then press ('Y' Enter).


NOTE: When selecting **CHARGING** or **STARTER** the system test will automatically run the battery test first to make sure the battery bank passes. Therefore, you need only use the battery bank test for testing the battery bank specifically.

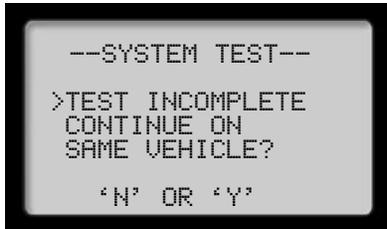


If the following appears, it means that a previous test is incomplete. Press ('Y' Enter) to complete the previous test or ('N' Esc.) to begin a new test.

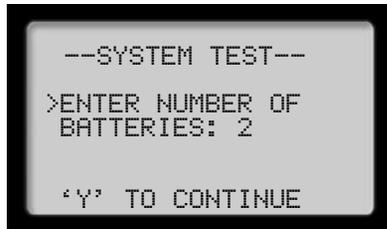


You will be asked to enter the number of batteries in the system. The number selected in the last test will appear. Simply use the (+) or (-) key to select the correct number. Then press ('Y' Enter) to continue.

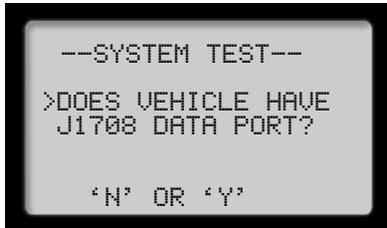

You will be asked if the vehicle has a J1708 data port. Answer Yes or No. Except in this case all tests will assume no. For more information see page 33.

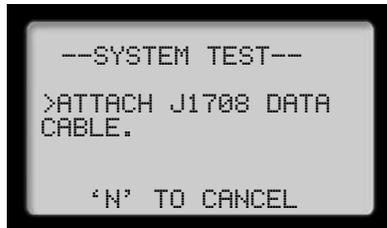

Attach the Optional J1708 Data Cable. If the cable is not correctly attached the test will not continue. Check the connection at the tester and the vehicle.

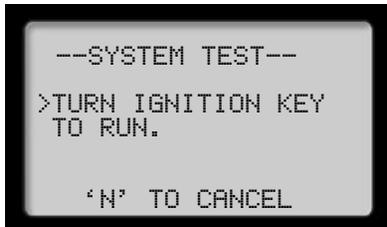

Turn on ignition key to run transfer of data.

J1708 connection is usually under the dash or left of the drivers seat on the floor.



From the main menu select SETUP MENU. The first selection was covered on page 7 and 8. This section will cover setting the time and date.



If you select Yes you can change the MONTH, DAY, YEAR, HOUR and MINUTE.



Select the month as 01 to 12 by using the (+Up) or (-Down) key then press enter



Select the day as 01 to 31



Select the year as 04 to 99



Select the hour as 01 to 12 AM/PM




Select the minute as 01 to 60

J1708 DATA CONT.

This gives the user a chance to check the J1708 connections and obtain pertinent information such as the ambient temperature for later use in testing the battery. Keep in mind that the ambient temperature may not be the actual temperature of the battery unless the vehicle battery has been in the place sufficient time for the battery to reach the surrounding ambient temperature. A low oil temperature would add a greater demand on the starter. This information is used by the BVA-2100 to calculate the condition of the starter.


Each test throughout the manual does not include the sequence for the J1708 cable attachment. The only exception is the battery bank test. Each menu sequence will, however, include the following:

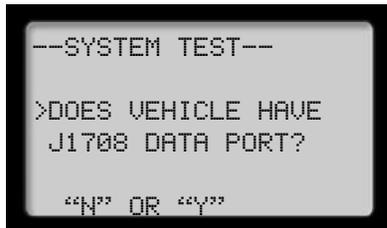

You will be asked if the vehicle has a J1708 data port. Answer Yes or No.

If you answer yes you will be asked to attach the J1708 cable to the receptacle under the dash or on the floor near the drivers seat as illustrated on page 33.

HELP MENU

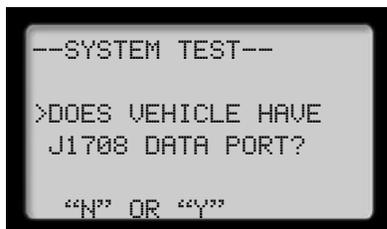


From the main menu SCROLL DOWN TO HELP MENU and press (Y Enter)

The following help selection will be listed adding valuable information not necessarily in manual:


GENERAL INFORMATION
SYSTEM TESTING
BATTERY TESTING
VOLTAGE DROP TESTING
CHARGING CABLES VDROPT TESTING
MAG. CIRCUIT VDROPT TESTING
GENERIC VDROPT TESTING
ALTERNATOR TESTING

STARTER TESTING
REVIEWING AND PRINTING
USING THE MULTIMETERS
J1708 DATA
SETTING UP THE BVA 2100
DOWNLOADING STORED DATA



BATTERY BANK CONT.

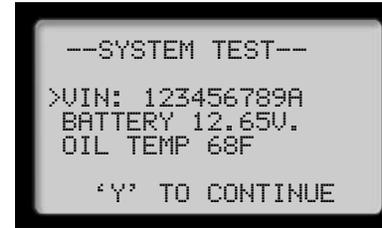


The vehicles data will appear. Much of the information accessed, such as the oil temperature will be use in the calculating test results. Press (Y Enter).

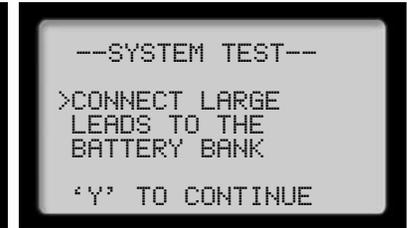


You will be instructed to connect the large leads. Connect the red clamp to the main positive cable coming to the bank and the black clamp to the main negative cable leaving the bank.

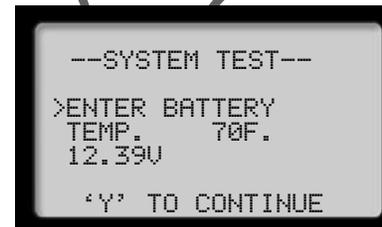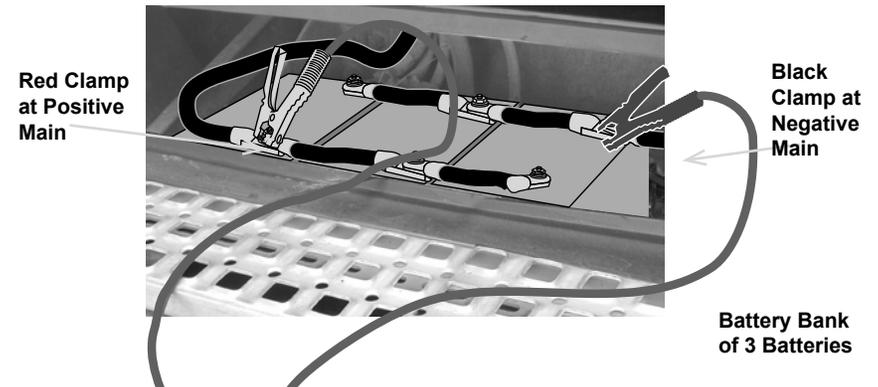


Using the (+) or (-) key adjust the temperature in units of 10 degrees. This should be the temperature of the battery(S). Consider where the vehicle has been before adjusting.

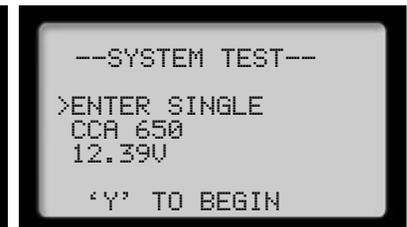


Using the (+) or (-) key adjust the CCA of an individual battery. If each battery varies in CCA approximate an average. If the CCA is unknown consider that most truck batteries range from 625-950 CCA.

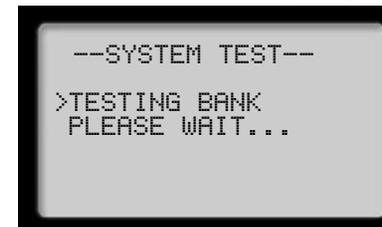


Press (Y Enter) to begin the test and wait for results. Example is at the top of page 10 (Individual Batter Test).

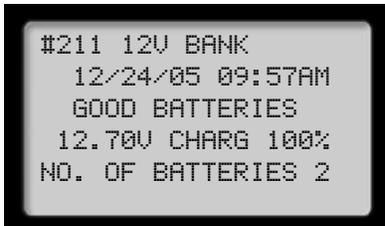

When the test results appear as **GOOD BATTERIES** after running the system battery bank test there is no need to run the individual battery test. Press (Y Enter) to return to menu.

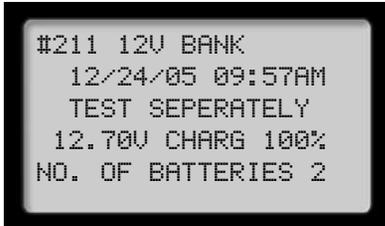


If the battery bank test results are low you will be instructed to test each battery separately. In this case you will be instructed to test each battery based upon the number of batteries you entered in the system battery bank test. (Press (Y Enter) to continue.

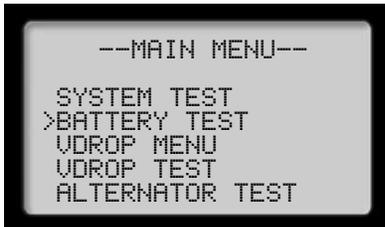

You can also select **BATTERY TEST** from either of the main menus. The same sequence below will follow, but the tester will assume there is only one battery to test. With the system test you will be instructed to test each battery separately depending upon the number of batteries entered in the system test.


Note! When testing batteries individually each battery should be disconnected. Avoid improper results and damage to the posts by using the included post adapters on threaded post batteries. If the configuration was set to prompt inspection the LCD will display the instruction.

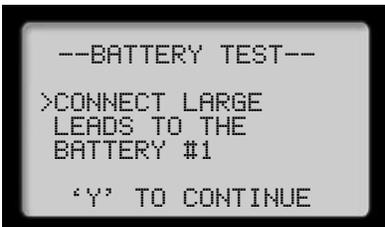

Connect the large red clamp to the positive and the large black to the negative battery terminal. If the clamps are connected improperly you will be prompted to correct the problem. The tester will then revert back to the beginning or main menu. Be sure to use post adapters on threaded steel posts as illustrated on the next page then press (Y Enter).



The prompt and others appear only if the user has configured to do so in **SETUP**. The same applies to entering the battery date code. [See page 7.](#)

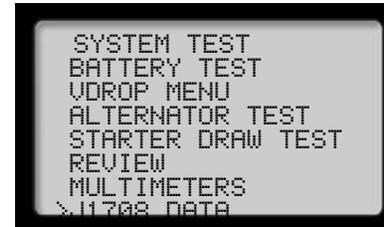

Select **J1708 Data** from the main menu. You will need to press (-Down) to scroll to the selection. The arrows to the right indicate directions they can be scrolled. Press (Y Enter) to make the selection.



Attach the Optional **J1708 Data Cable**. If the cable is not correctly attached the test will not continue. Check the connection at the tester and the vehicle.



Turn on ignition key to run transfer of data.




The vehicles data will appear. Much of the information accessed, such as the oil temperature will be used in the calculation of the test results. Press (Y Enter).




If **ERROR** appears the connections has not been established.

MULTIMETERS

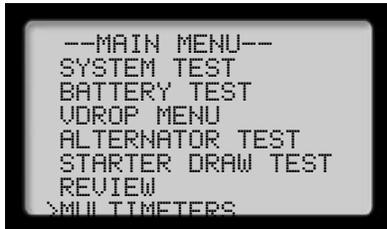


Select MULTI METER from the main menu and press (Y Enter).

This gives the user a chance to compare the voltage from the large clamps and the external leads.

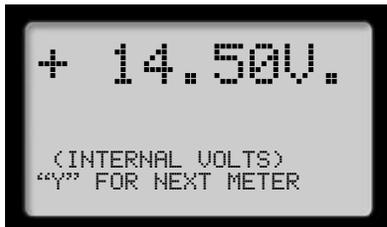


The first display gives the internal volts.

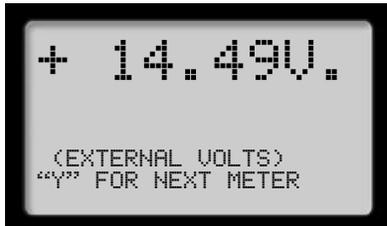



Press (Y Enter) and for the external volts.

Note: The Amps are displayed only if the Amp Probe is connected.

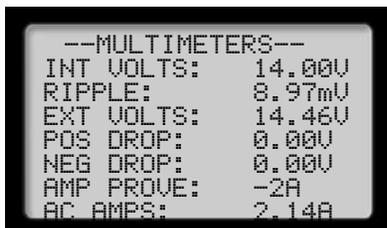

Press (Y Enter) again for an extended menu results. Again, the Amps are only displayed if the Amp Probe is connected.


INDIVIDUAL BATTERY TEST CONT.

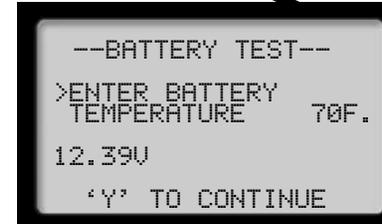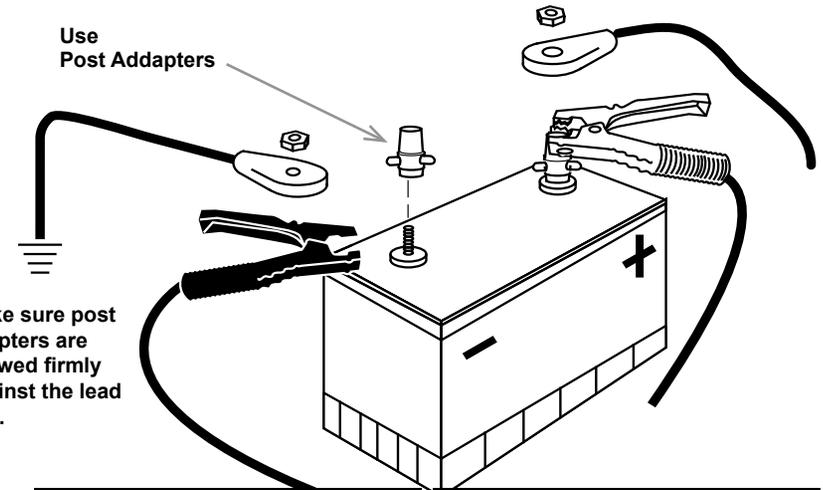


Using the (+) or (-) key adjust the temperature in units of 10 degrees. This should be the temperature of the battery.



Using the (+) or (-) key adjust the CCA of the battery. Press (Y Enter) to begin test.

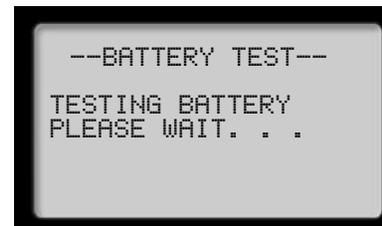


Wait for results.

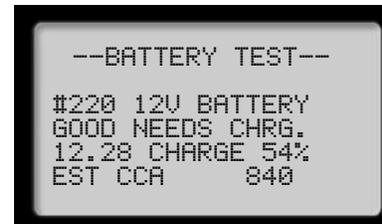


There are five test results:

GOOD BATTERY
MARGINAL BATTERY
BAD BATTERY
GOOD NEEDS CHARG.
CHARGE AND RETEST

The System Test Introduction also applies to the Charging System Test. See page 7. It is advisable to use only the system test until you become proficient and have good reason to test an individual component.

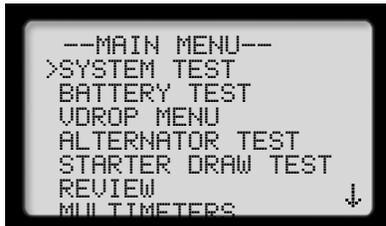


From the main menu and with the > to the left Press ('Y' Enter) to select System Test.

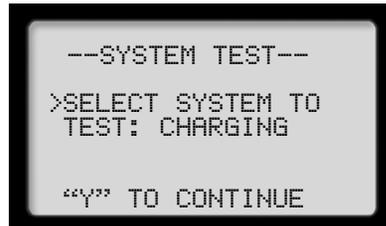


Simply use the (+) or (-) key to select CHARGING and then press ('Y' Enter).

NOTE: When selecting CHARGING or STARTING the system test will automatically run the battery bank test first to make sure the battery bank passes. See Battery Bank Test (page 10) for instructions. This section covers the CHARGING SYSTEM section after the Battery System Test is completed. You will be asked if the vehicle has a J1708 data port. See page 33 for more information. This manual will assume no in all examples that follow.

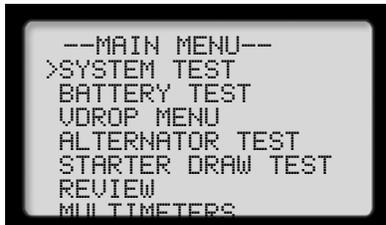

Enter rated alternator output. Simply use the (+) or (-) key to change the rating in units of 5 Amps. Press ('Y' Enter).

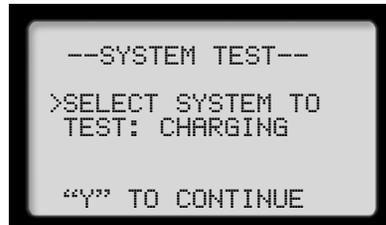


Connect large leads to the Alternator then press ('Y' Enter) to continue.

NOTE: just as it is important to determine the condition of the battery system before testing the alternator it is also important to test the cable system, otherwise the alternator may be prematurely suspected when it is either the battery system or the cable system. For this reason, the following (beginning on page 15) represents the individual voltage drop test required before the alternator test is completed.

Manual Print Operation

Press (PRINT) to obtain a printout. This is done after each finished test or during REVIEW.


Note: Tear printouts down to provide even separation and avoid jamming.


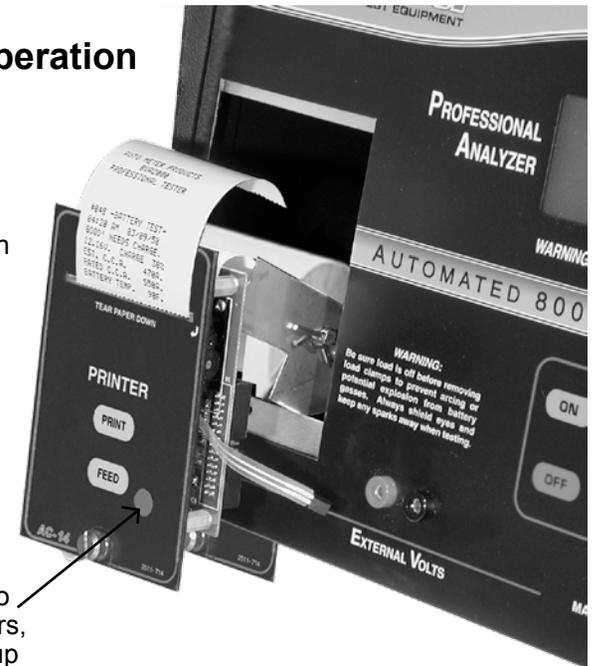


When using one of Auto Meter's handheld testers, the AC-14 Prints from up to 50 ft. away by means of an infrared receiver.

Changing Paper:

1. Disconnect clamps from any battery.
2. Unplug the AC cord.
3. Loosen the thumbscrew at the bottom of the printer.
4. Carefully remove the cover.
5. Replace the new paper roll by feeding it under the roll and over the PC board as illustrated. Press the FEED button to check the advance of the paper.
6. It is best NOT to disconnect the ribbon cable, but if for any reason you do disconnect the ribbon cable make sure the top edge of the ribbon cable attached to the BVA-2100 is also correctly aligned with the top of the printer. Do not twist the ribbon cable. Make sure the pins are aligned properly. Do not force, but make sure the connection is solid.
7. Reinstall printer by inserting the top tab under the panel and tightening the thumbscrew. Be careful not to damage the printer ribbon cable.

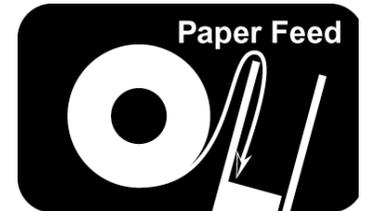

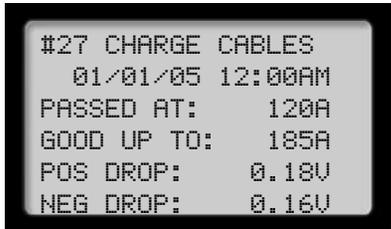
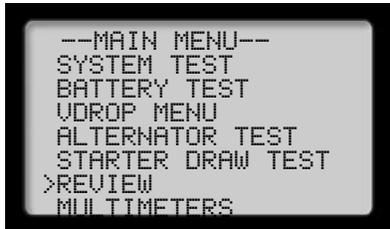


From the main menu select **REVIEW**. The last test will be displayed exactly as it was displayed after the test was made


Press (+Up) or (-Down) key to increment or decrement to the desired test. The last 250 tests are held in memory. The same tests can be downloaded to a PC. See the Download section for more information. Press (N Esc.) to return to menu.

Press PRINT and the optional printer will print the test displayed on the LCD.

Sample.

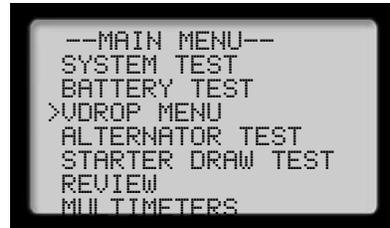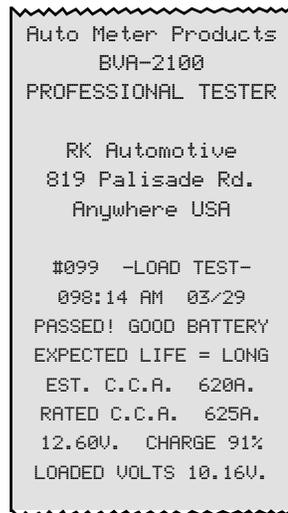

The individual charging voltage drop test can also be selected from the main menu

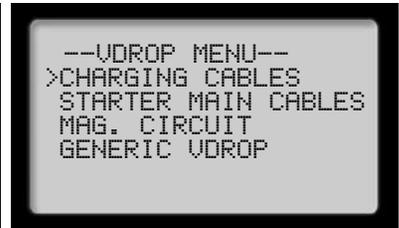



... followed by a selection of Charging Cables.

You will be asked for the alternator rating and instructed to connect the large clamps to the alternator as in the charging system test.


ALTERNATOR HOOKUP

- Red to Positive
- Black to Ground


Connect the small leads to the battery bank - the red on the positive main and the black on the negative main and not to an individual battery. The added small external leads will check the cables

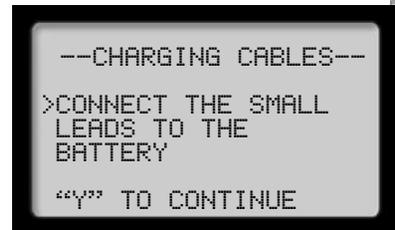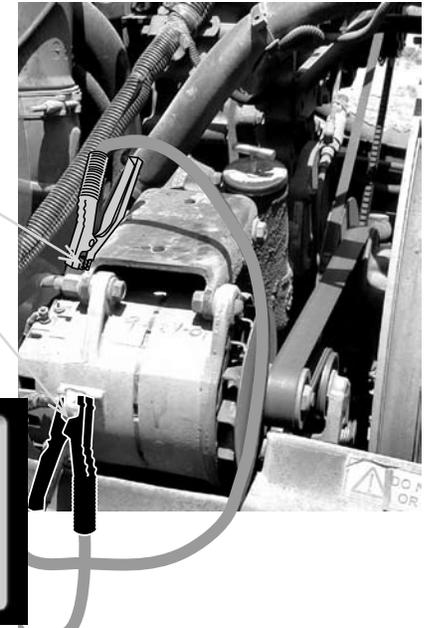


before the alternator is tested. This is the individual VDROp Test

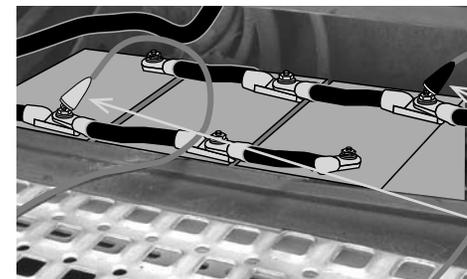

- Black Clamp at Negative Main **BATTERY HOOKUP**
- Red Clamp at Positive Main

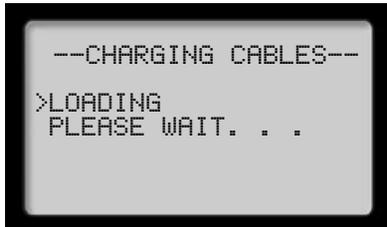

If all connections are correct press (y Enter) to begin VDrop Test. Wait for a load to be applied. The results will vary depending upon the conditions of the cables. The test will either pass or fail. If it fails, you will be asked to correct the condition before testing the alternator

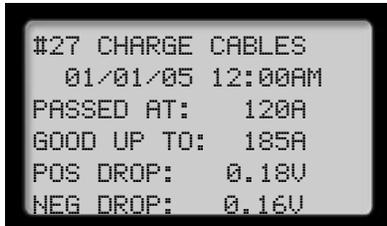

Both the positive and negative circuit results will be indicated. If the test does not pass, correct the connection or replace the cable and run the test again. The BVA 2100 will automatically resume the test after it is disconnected. Just answer 'YES' when prompted.

VDROP ERROR MESSAGES

One of the following may appear during any drop test sequence. Correct the situation before continuing.


- LARGE LEADS NOT CONNECTED
- BAD CONNECTION ON LARGE LEADS
- SMALL LEADS REVERSED
- SMALL LEADS NOT CONNECTED
- CHECK LARGE RED LEAD
- CHECK LARGE BLACK LEAD
- TURN OFF ENGINE AND ACCESSORIES

System noise indicates some device is turned on. Correct by turning vehicle loads off before continuing.


- ELECTRICAL SHORT OR ACCESORY DRAW

Check tester connection and make sure vehicle loads are off.


Once the VDrop Test is complete and the cables have passed the test, the CHARGING SYSTEM TEST will finalize with the ALTERNATOR TEST starting on page 17.

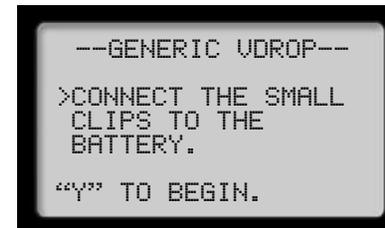

Then connect small leads to the battery and press (Y Enter).

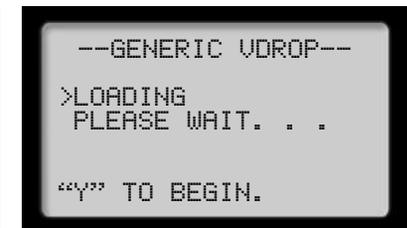

If all connections are correct, wait for a load to be applied.

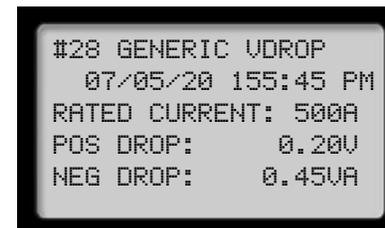


The results will vary depending upon and the conditions of the cables. Both the positive and negative circuit results will be indicated from the single test.


If the overall voltage drop is not within the desired specifications the small leads can be moved closer along the line being tested and the test run again (see dotted lead on previous page). If the results are desirable, it is the section not included in the last test. If the results are not desirable the problem is most likely in the section being tested. Repair and test the entire section again.

11 GENERIC VOLTAGE DROP TEST


Generic System Setup

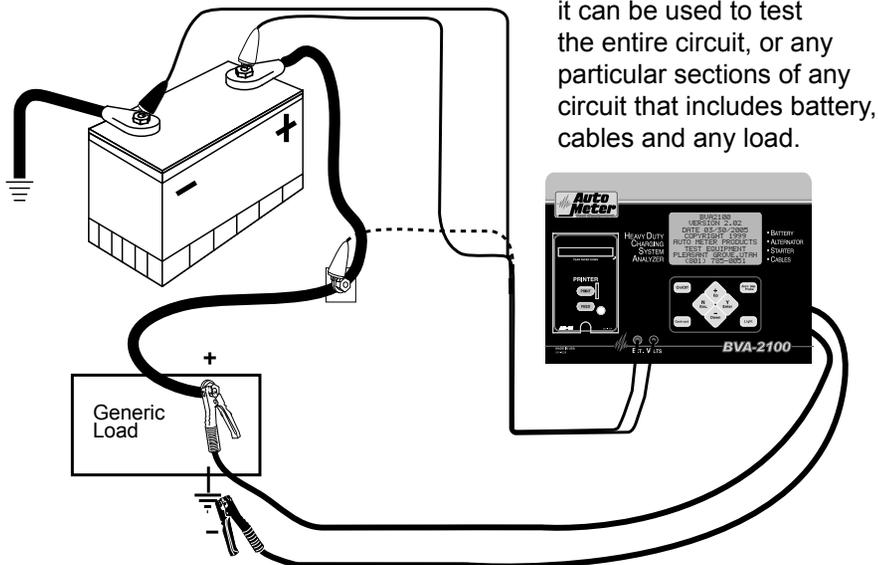

The generic setup can be used in all the previous applications as well as it can be used to test the entire circuit, or any particular sections of any circuit that includes battery, cables and any load.

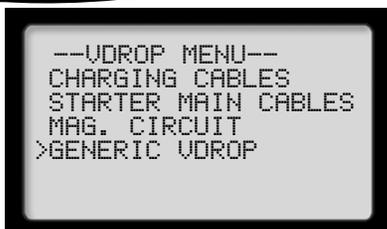


After selecting >VOLTAGE DROP from the main menu...

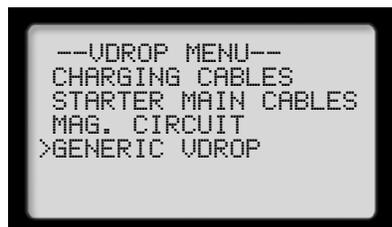

press (Y Enter).

Using the (+/-) key adjust Amp rating to that of the generic load device.


...select >GENERIC V DROP and

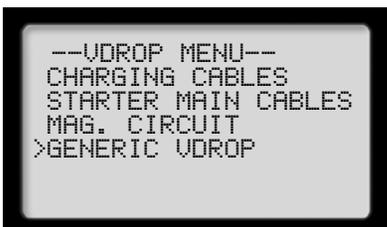

Connect large leads to the generic load.

6 INDIVIDUAL ALTERNATOR TEST



If the battery bank and the charging main cables pass then the Charging System Test will take you to the individual Alternator Test.

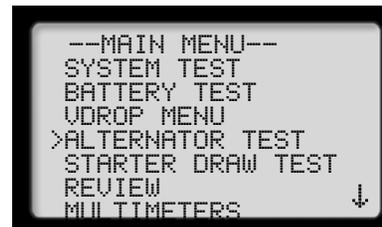

This test can also be selected from the main menu by selecting Alternator Test then press (Y Enter).



If the unit is setup to require visual checks you will be asked to inspect belt condition and tension. Also, if this is an individual alternator test and not part of the CHARGING SYSTEM test you will be asked to enter the alternator rating

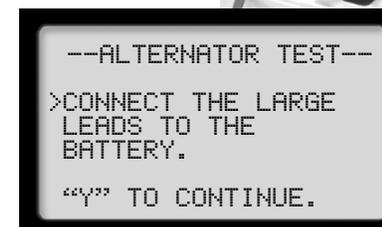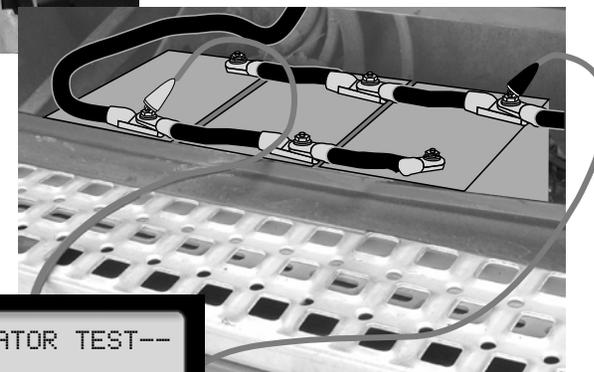

If the Amp Probe is attached to the tester you will be asked to ZERO the probe and attach it to the Alternator output. The test will run without the Amp Probe, but is considered to be slightly more accurate if the probe is used. See page 19 for instructions regarding the Amp Probe.

ALTERNATOR TEST RESULTS

```
--ALTERNATOR TEST--
>START ENGINE, IDLE
AT ABOUT 1000 RPM.

12.73V

"Y" TO CONTINUE.
```

Start Engine

```
--ALTERNATOR TEST--
>ALLOW VOLTAGE TO
STABILIZE.

12.73V

"Y" TO BEGIN.
```

Allow voltage to stabilize until it stops rising. Press (Y Enter) to begin.

```
--ALTERNATOR TEST--
>TESTING ALTERNATOR
5 SECONDS.

12.61V +0000 A
PLEASE WAIT. . .
```

Wait for test . . .

```
--ALTERNATOR TEST--
>REV ENGINE TO GOV.
SPEED FOR 10 S.

12.61V +000 A

"N" TO CANCEL.
```

Rev the engine to governed speed for 10 seconds. If no results appear press (Y Enter).

```
--ALTERNATOR TEST--
>TESTING ALTERNATOR
5 SECONDS.

12.61V +0000 A
PLEASE WAIT. . .
```

If a rev'd engine is not detected, the test will assume a governed speed.

```
--ALTERNATOR TEST--
>REV ENGINE TO GOV.
SPEED FOR 10 S.

12.61V +000 A

"N" TO CANCEL.
```

The test result will appear.

STARTER DRAW TEST CONT.

```
#216 12V STARTER
NORMAL DRAW
OIL TEMP: 58F

CURRENT: 1240A
```

There are 2 results with J1708

```
#217 12 STARTER
HIGH DRAW
OIL TEMP: 58F

CURRENT: 1240A
```

```
#217 12V STARTER
BEG VOLTS: 12.56
END VOLTS: 9.48

CURRENT: 1240A
```

Results without J1708

If the results are out of specification do the following:

- Inspect the connectors for excessive voltage drop.
- Repair or replace any defective cables or connectors.
- Retest the system.

If still out of specifications: **High** Amp reading may indicate engine is out of time or a faulty starter. Some possible causes are shorted windings, bent armature, broken housing or bad bearings. Repair or replace starter as needed.

STARTER DRAW AND DIESEL ENGINES


There are a few points to consider in testing a starter on a diesel engine. The BVA-2100 is designed to recognize any significant amount of draw; this includes glow plugs in small diesel engines. In heavy-duty applications consider computer and accessory draw.

- Make sure you start the engine quickly. The engine should be warm.
- Turn the ignition on and allow the glow plugs to heat up and click off before you run the Starter Draw Test. This could be done at the time the Amp Probe is attached.
- Repeat the test in different ways and compare results.

The following are test result samples:


- LOW REGULATION, BAD DIODE, LOW OUTPUT
- HIGH REG, BAD DIODE, PARTIAL OUTPUT
- LOW REG, LOW OUTPUT
- HIGH REG, GOOD DIODES, LOW OUTPUT

The starter draw test measures the amount of current needed to crank the engine and provides the initial information to diagnose and/or further test the starting system if necessary. What may appear to be a major problem may turn out to be a minor problem. Also, what appears to be a starter problem may be something more major.


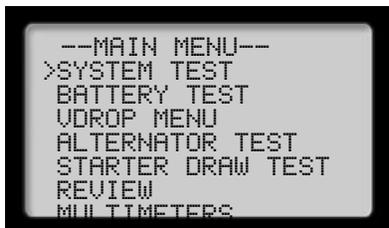


This test is a continuation of the System Test and can also be selected from the main menu by selecting Starter Test. If this is not part of the continuing system test you will be asked if the vehicle has a J1708 data port.


If the Amp Probe is attached you will be asked to zero it and attach it to the starter cable. See page 19 for more information.

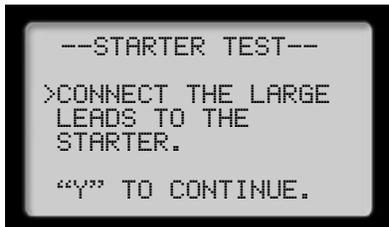

Connect large leads to the starter.

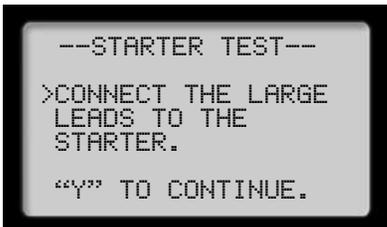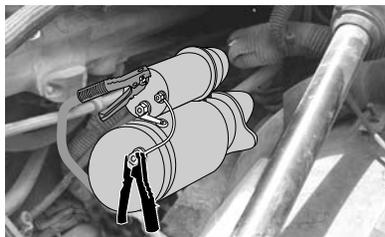


Then connect small leads to the battery.

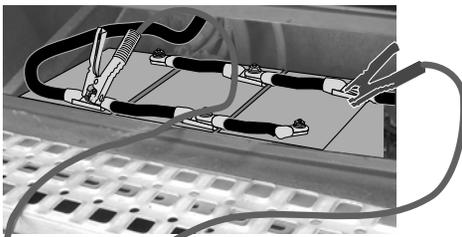

Waiting for loading then start or crank the engine when instructed.

After a few seconds the test result will appear.

The Amp Probe is optional and can be used in the Alternator and the Starter Draw Test whether they are individual tests or within each of the system tests. The Amp Probe can also be used in the Multimeters test. This section explains the proper use of the Amp Probe, but is not required to run any of the tests. It only provides assured accuracy for those wanting these results.

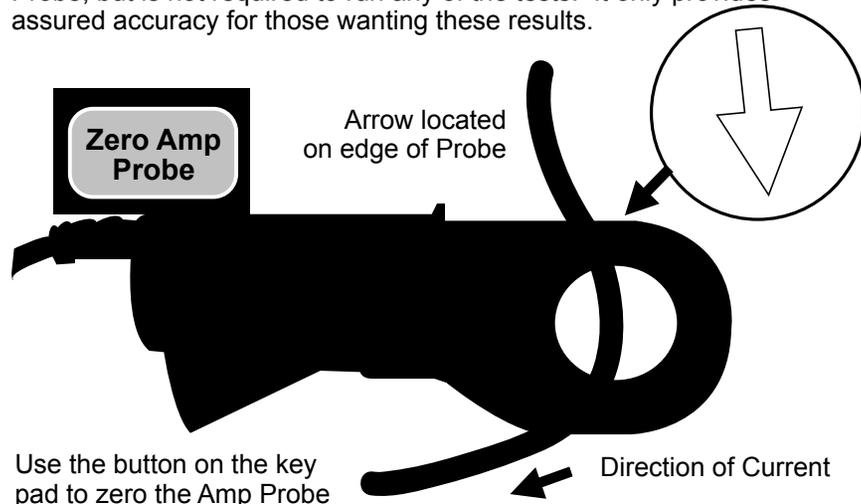

Use the button on the keypad to zero the Amp Probe

in the Alternator and Starter Draw tests you will have two additional menu options if the AMP Probe is attached on the rear of the tester. If the menus do not appear the Amp Probe is not attached properly.


The following are examples of use within a test sequence.



You will first be asked to zero out the Probe. Pressing the "Zero Amp Probe" on the keypad. Instead of +00003 A, it should read +00000 A.



You will then be asked to attach the probe to a particular wire such as alternator output or starter cable.

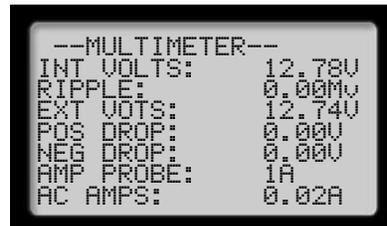


In the multimeters test the bottom two lines will not appear if the Amp Probe is not connected. In other test results there may be slightly different displays.

7


STARTING SYSTEM TEST

The System Test Introduction also applies to the Starting System Test. See page 7. It is advisable to use only the system test until you become proficient and have good reason to test an individual component.

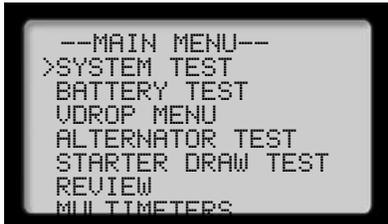

From the main menu press ('Y' Enter) to select System Test.



When System Test is selected, the last test selection will appear.

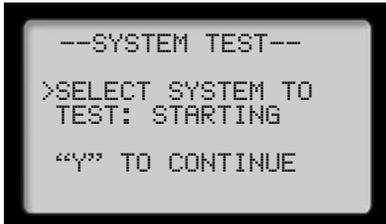


You have a choice of BATTERY, CHARGING or STARTING.

Simply use the (+) or (-) key to select STARTING and then press ('Y' Enter).

NOTE: When selecting CHARGING or STARTING the system test will automatically run the battery bank test first to make sure the battery bank passes. See Battery Bank Test for instructions. This section covers the STARTING SYSTEM TEST section only. You will be asked if the vehicle has a J1708 data port. See page 33 for more information.

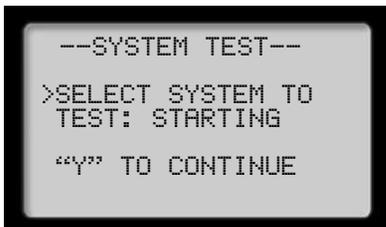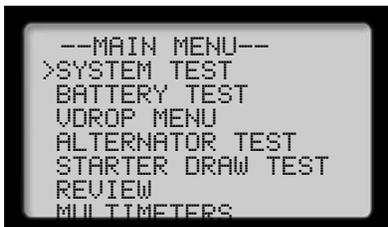

Disconnect the S-Terminal from the starter solenoid.

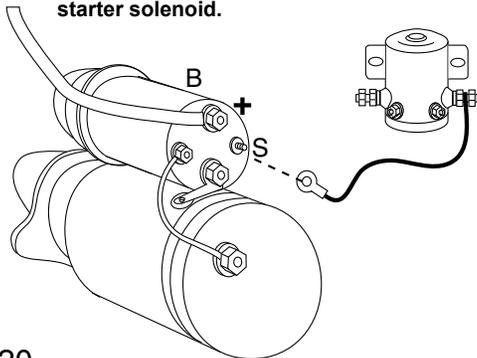


Select starter type as either STRIGHT DRIVE or GEAR REDUCTION using the (+) or (-) key, then press ('Y' Enter).


This is the beginning of the Magnetic Circuit Test continuing on the next page.

STARTING VDROPM CONTINUED

Note: The circuit from the battery to the starter junction and to each battery bank is being tested. If a dual battery bank is used the menu instructions will differ than with a single battery bank. In the following sequence it will be assumed that the choice is a dual battery bank.

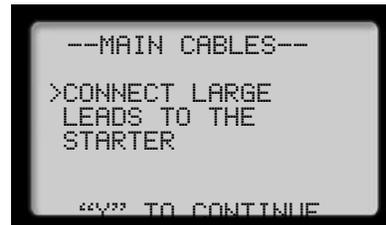


Connect large leads to the starter.

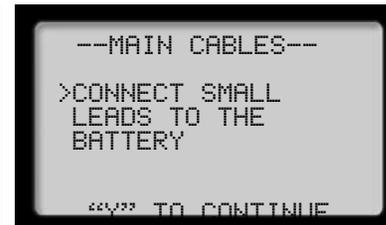


Then connect small leads to the battery bank – the red on the positive main and the black on the negative main and not to an individual battery. The added small external leads will check the main cables. Press (Y Enter).


Just as the System Test checks the Magnetic Circuit first it also checks the main starting cables.

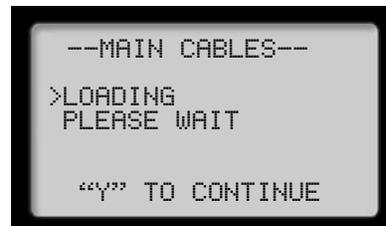

If all connections are correct, wait for a load test to be performed.

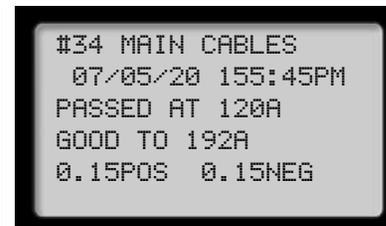


The results will vary depending upon and the conditions of the cables. Both the positive and negative circuit results will be indicated from the single test. If the test does not pass, correct the connection or replace the cable and run the test again. The BVA-2100 will automatically resume the test after it is disconnected. Just answer 'Yes' when prompted.

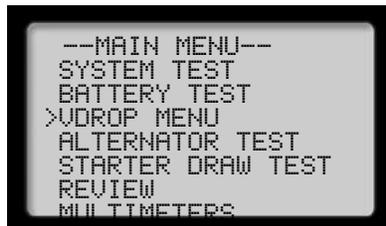


9

STARTING SYSTEM VDROP TEST



Loose or corroded terminal connections and damaged or undersized wires can produce resistance, which causes a voltage drop between starting system components. Using the following procedure, Volt readings can be taken at each part of the circuit, pinpointing the location of the voltage drops. In the System test the charging cables are tested before the individual starter can be tested.

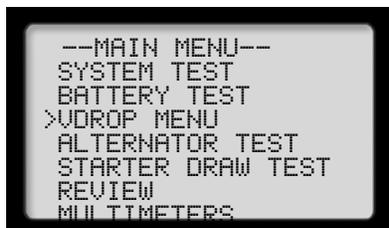

This test can also be selected from the main menu by selecting Starter Test then press (Y Enter).

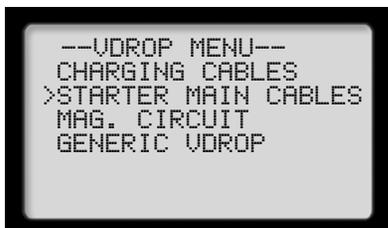

Select >VOLTAGE DROP from the main and then select >STR MAIN CABLES and press (Y Enter).

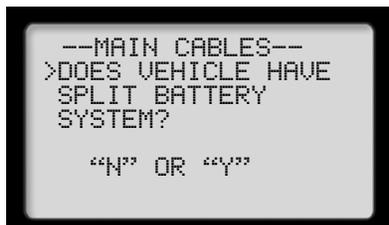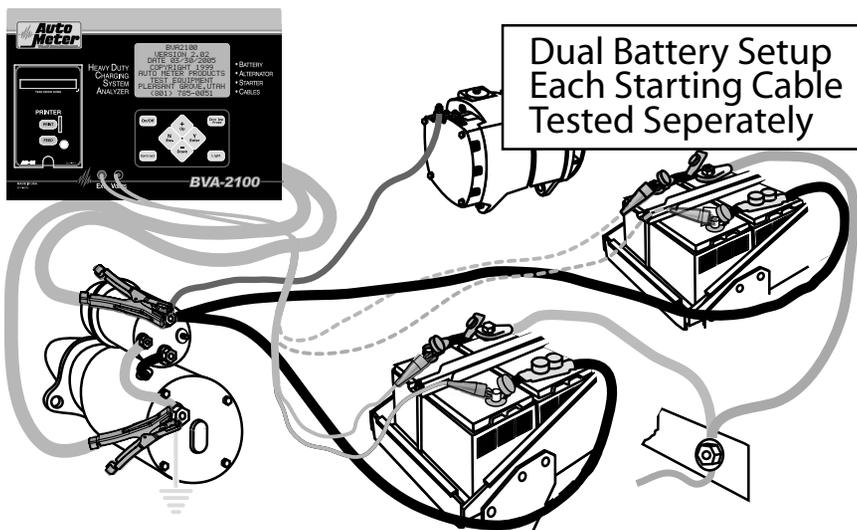


Does the vehicle have a split battery system? This entry is necessary for the tester to calculate 1/2 for each system if selected.


8

INDIVIDUAL MAGNETIC CIRCUIT TEST



The Magnetic switch circuit supplies a path for current to the coils of the starter solenoid with minimum voltage drop. The Magnetic circuit is indicated by the dotted line on the illustration below. The Magnetic circuit test is designed to test the voltage drop of this circuit. It has three steps. If it passes the first test the whole circuit passes and there is no need to continue. If the first test fails, the next two tests are completed to obtain results of each leg and the magnetic switch itself. The Magnetic switch is energized by the ignition switch in each test. For safety, disconnect the negative cable from the battery while making the connections.

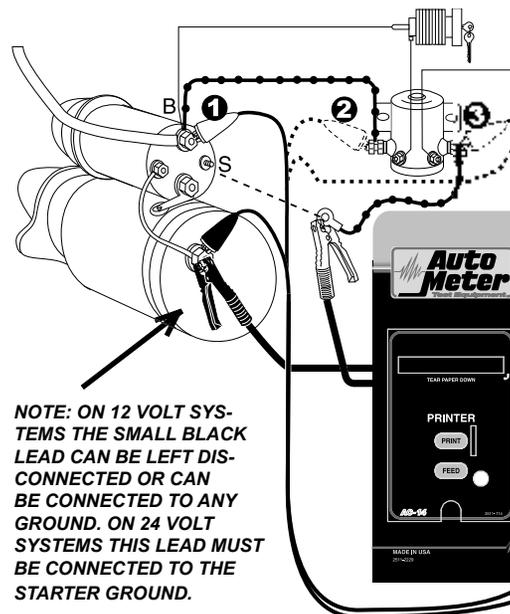

Magnetic Circuit 3-Step Setup

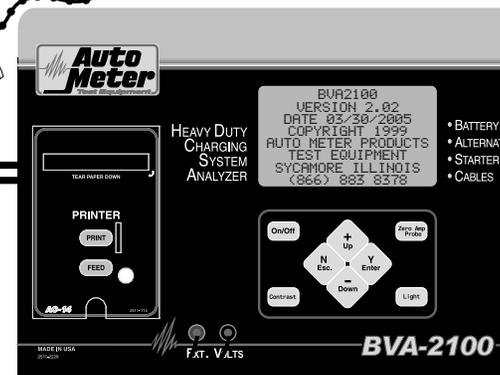

NOTE: ON 12 VOLT SYSTEMS THE SMALL BLACK LEAD CAN BE LEFT DISCONNECTED OR CAN BE CONNECTED TO ANY GROUND. ON 24 VOLT SYSTEMS THIS LEAD MUST BE CONNECTED TO THE STARTER GROUND.

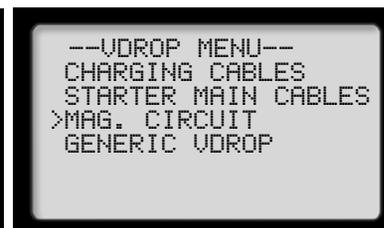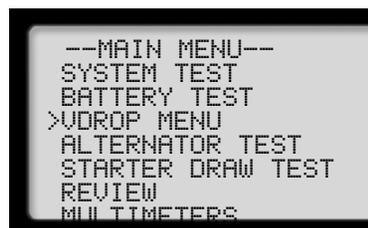

This is a continuation of the Starting System Test, but can also be selected from the VDrop Menu by selecting >MAG. CIRCUIT then press Enter. In the individual test you will be asked to disconnect the Magnetic circuit from the "S" terminal on the starter solenoid as explained on the previous page. This is necessary to avoid starting the engine during this test sequence.

INDIVIDUAL MAGNETIC CIRCUIT TEST CONT.

MAGNETIC CIRCUIT TEST CONTINUED

--MAG. CIRCUIT--

>CONNECT THE LARGE
LEADS TO THE
S-TERMINAL/GND. .
"Y" TO CONTINUE

Connect the large red clamp (+) to the disconnected ring from the S-terminal magnetic circuit. Connect the large black clamp (-) to the starter ground (See Illustration)

--MAG. CIRCUIT--

>CONNECT THE SMALL
CLIPS TO THE
STARTER SOL/GND. .
"Y" TO CONTINUE

Connect the small red lead (+) to the "B" terminal (+) of the starter solenoid. Attach the small black lead (-) to the starter ground (See Illustration - small clamp position 1).

--MAG. CIRCUIT--

>MOVE THE SMALL
RED LEAD TO THE
MAG. "HOT"
"Y" TO CONTINUE.

Move the small red lead to the negative (-) side of the magnetic switch, press enter and energize again for 3-5 seconds (See Illustration - small clamp position 3).

#340 MAG/CABLES
LEG1: 2.22V FAIL
MAG.: 0.41V FAIL
LEG2: 0.12V PASS

The final results will appear indicating the section of the circuit or switch that is in need of repair.

--MAG. CIRCUIT--

>ENERGIZE THE
MAG SWITCH FOR
3-5 SECONDS.
"N" TO CANCEL.

Reconnect the negative terminal on the battery. Then energize the Magnetic Switch for 3-5 seconds. Note. This can be done by a remote starter or by a second person turning the ignition.

--MAG. CIRCUIT--

>LOADING
PLEASE WAIT

Wait for results.

#34 MAG. CIRCUIT
07/07/20 155:45PM
PASSED!
DROP WITHIN SPEC
DROP AT 80A: 0.72V

If voltage drop is within specifications the whole circuit passes.

#34 MAG. CIRCUIT
07/07/20 155:45PM
FAILED
DROP AT 80A: 1.54V

If the test FAILED! the BVA-2100 will advance to the next menu. Failure is indicated by more than 1 Volt drop at 80 Amps.

--MAG. CIRCUIT--

>MOVE THE SMALL
RED LEAD TO THE
MAG. "HOT"
"Y" TO CONTINUE.

Move the small red lead to the magnetic switch hot side connection from the battery, press enter and energize the switch again for 3-5 seconds (See Illustration - small clamp position 2).