

6-VOLT UNIVERSAL INSTALLATION INSTRUCTIONS

Your 6-Volt Battery is equipped with a complete set of wiring pigtails to ensure proper fitment to your motorcycle, ATV, or PWC. Use your old battery to determine proper connection. Follow these easy steps if your old battery is one of these part numbers.


Old Part Number	New Part Number
6N2-2A	6N2-2A UNV
6N2-2A-1	6N2-2A UNV
6N2-2A-2	6N2-2A UNV
6N2-2A-3	6N2-2A UNV
6N2-2A-4	6N2-2A UNV
6N2-2A-5	6N2-2A UNV
6N2-2A-6	6N2-2A UNV
6N2-2A-7	6N2-2A UNV
6N2-2A-8	6N2-2A UNV

Old Part Number	New Part Number
6N2-2A-2C	6N2-2A-2C UNV
6N2-2A-2C-1	6N2-2A-2C UNV
6N2-2A-2C-2	6N2-2A-2C UNV
6N2-2A-2C-3	6N2-2A-2C UNV

Old Part Number	New Part Number
6N4-2A	6N4-2A UNV
6N4-2A-1	6N4-2A UNV
6N4-2A-2	6N4-2A UNV
6N4-2A-3	6N4-2A UNV
6N4-2A-4	6N4-2A UNV
6N4-2A-5	6N4-2A UNV
6N4-2A-6	6N4-2A UNV
6N4-2A-7	6N4-2A UNV
6N4-2A-8	6N4-2A UNV

Old Part Number	New Part Number
6N4B-2A	6N4B-2A UNV
6N4B-2A-3	6N4B-2A UNV

Step 1: Set your old battery next to the new battery

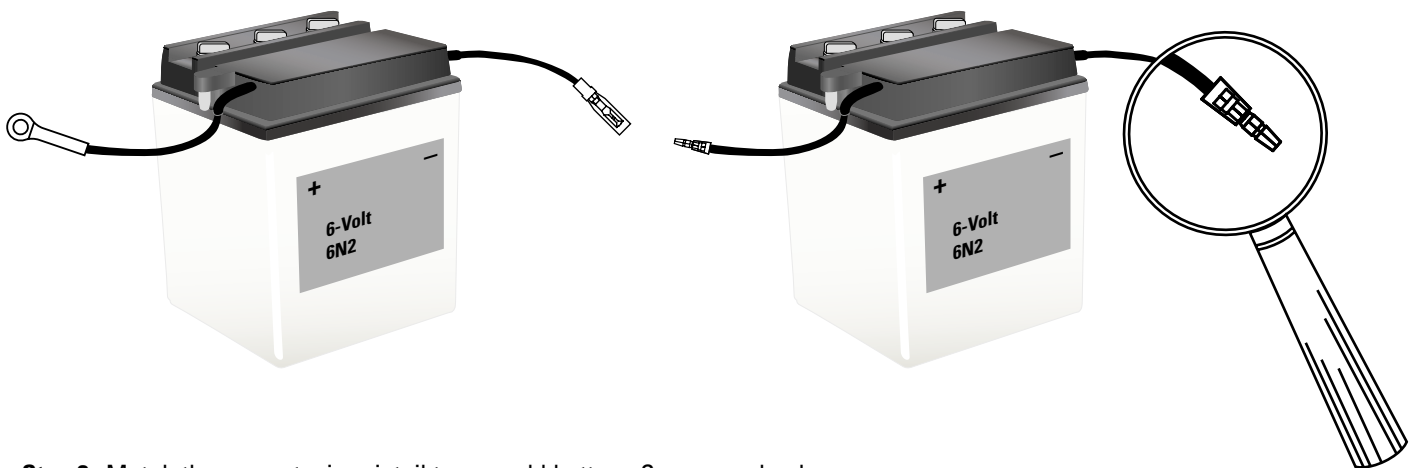

Step 2: Match the correct wire pigtail to your old battery. See example above

- 1.
- 2.
- 3.
- 4.
- 5.

In this example, #2 pigtail matched the (+) positive lead and option #1 matches the (-) negative lead of the old battery.

Step 3: Snap the correct lead to each wire terminal end.

Step 4: Follow the battery Owners Manual for proper procedure for filling the battery with acid and placing on charge. The Owners Manual will give you the correct charging time. Once these steps have been completed, you are now ready for installation.